


**NOTE: DRILLING OF THIS BASIN IS TO BE UNDERTAKEN ONLY BY A QUALIFIED TRADESPERSON SUCH AS A STONEMASON OTHERWISE YOUR WARRANTY COULD BECOME VOID**

**BATHROOMBRANDS®**

Step 1: Place the template on the basin tap ledge.

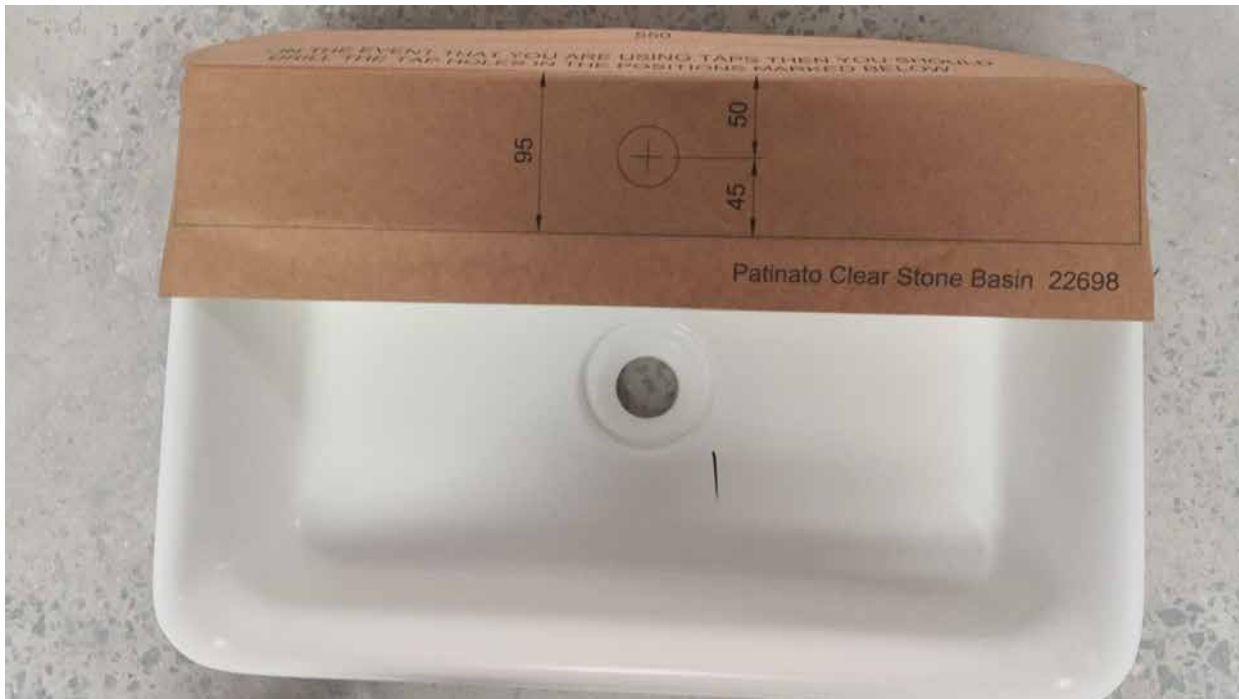

Step 2: Prepare the tool: it's a 35mm hole opener.



Step 3: Aim the drill bit at the center of the tap hole on the template.



Step 4: Secure the basin, hold the drill tool vertically, and gently push it down to drill the tap hole.



